KITCHEN APPLIANCE SERIES

RANGE HOOD

INSTRUCTION MANUAL

Read this manual carefully before using the appliance, and store it in a safe place for future reference.

For authorized service & original parts.

RANGE HOOD

Model: H75.6P/H75.7P/H75.9P/H75.10P

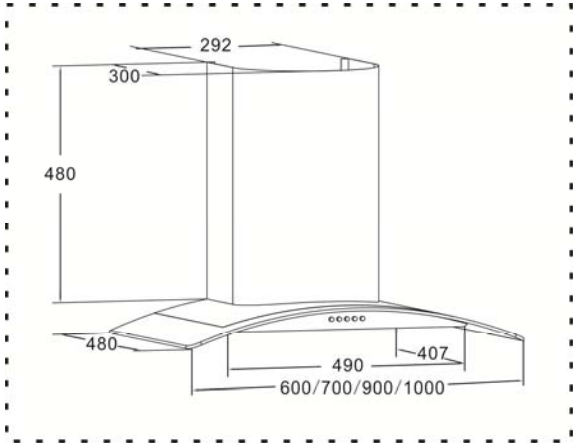

11. Cleaning & Maintenance

* Before cleaning, Please confirm that the power is switched off

11.1 Cleaning the surface of hood every week. Use mild soap or detergent to clean the hood.

11.2 Avoid the use of scouring powers of dishwasher compounds.

11.3 Grease filter may be washed using mild soap or detergent when use it three months. (heavy grease build-up may not be cleaned easily and the filter may require replacement)

11.4 Do not use harsh alkalis or abrasives.

11.5 Charcoal filters cannot be cleaned and must be replaced when use it six months.

Content

Introduction ……1

Features ……1

Installation ……1

Lamp Change ……2

Notice of Installation ……3

Safety Warning ……3

How to Use ……4

Trouble Shooting ……5

Electrical Diagram ……6

Specifications ……6

Cleaning & Maintenance ……7

1. Introduction

1.1 This appliance has been manufactured with materials and processes that respect the environment. We hope that you will continue this important consideration in the operation of this appliance & the disposal of the packaging materials, thank you.
1.2 The installation work must be undertaken by a qualified technician experienced in cooker hood installation. Please connect the correct power rating.
1.3 The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions for installation contained in the following text.
1.4 The appliance is not intended for use by young children or infirm persons without supervision.
1.5 Young children should be supervised to ensure that they do not play with the appliance.
1.6 The maximum number of hobs covered by range hood should not exceed 5 burners.
1.7 Any modifications to the appliance, electric wire and plug is dangerous & voids the warranty.

2. Feature

2.1 This appliance is manufactured from top quality materials, and offers superb streamlined effects.
2.2 With high suction power and low noise, it is designed to remove cooking fumes from your kitchen quietly & effectively.

3. Installation

3.1 The range hood should be mounted at a distance of 650mm- 700mm from the cooking surface for safety & optimum performance (If the instructions for installation of the gas hob specify a greater distance, this has to be taken into account.) (see pic1). That exhaust air must not be discharged into a flue which is used for exhausting fumes from other appliances burning gas or other fuels.

9. Electrical Diagram

Mechanical Control

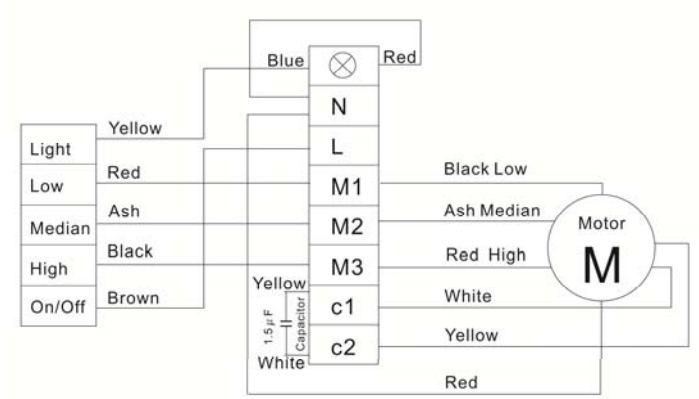

10. Specifications

Rated Input	220V~240V,50Hz
Rated Power	122W
Lighting Power	2W X 1
Motor Power	120W
Drive Mode	Single Motor
Air tube diameter	150mm

8. Trouble Shooting

If any problem occurs, please remove the plug from the socket and contact the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Problem	Cause	Solution
Light on, but motor does not work	The outlet valve is blocked	Detach flue and duct then turn on the hood to check if the valve opens
	The capacitor has failed	Call for technical service
	The control switch has failed	Call for technical service
Light does not work, motor does not work	No power supply	Plug another appliance into the socket to confirm there is power supply
	Fuse has blown	Open up the plug and replace the 13A fuse
Vibration	The propeller is damaged or unbalanced	Call for technical service
	The hood is not installed correctly	Review the installation instructions & check the installation again for loose screws, brackets or connections
Insufficient suction effect	The distance between the hood and the cooker is too long	Check that the distance is between 650mm to 700mm
	The filters are saturated	Clean the filters from grease residue and replace after drying.

3.2 To install onto the wall, drill 2 holes of φ8mm on a sturdy wall and in line with the hood.
3.3 Insert expended screws into the holes.
3.4 Fix drilling template on the wall. (See pic2).
3.5 Install the duct (not offered) to the hood air outlet And put the other end out of the wall (See pic3).
3.6 Mount the U-shaped bracket (alternative part), make sure it's firmed (see pic4).

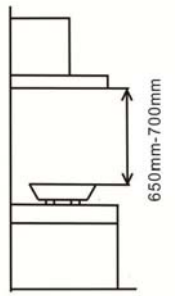

pic 1

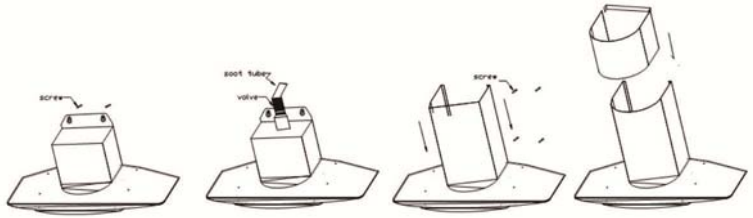
Pic 2 Pic 3 Pic 4

4. Lamp change

1.Turn off the power supply by unplugging from the wall socket.
2.Unfasten the screws on the glass canopy and remove the glass.
3.Detach the low-voltage electric connector.
4.Then unfasten the screws on the lamp (see pic 4B).
5.Replace the lamp (LED Lamp Max.2W) and then reinstall in the reverse manner.

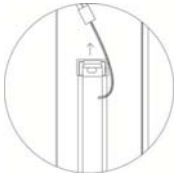
PIC 4B

5. Notice of Installation

5.1 Before installation, please make sure that there is adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels and clean up the surrounding area, to avoid suction of the such as bits of broken wood.
5.2 It can not share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube.
5.3 The bending of soot ventilation tube should be ≥120°C, parallel or above the start point and should be connected to the outdoor.
5.4 After installation, test carefully on the horizontal degree, see pic7.
5.5 Be sure that the plug is accessible after installation.

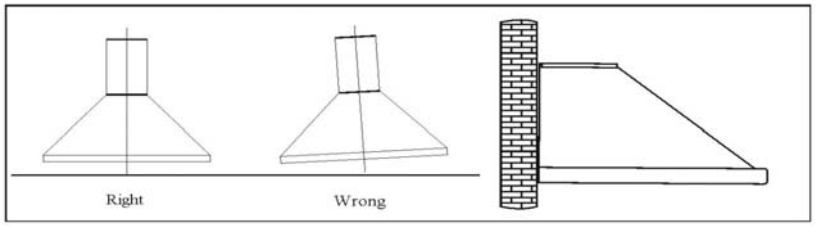

PIC 7

6. Safety Warning

* There must permanent & adequate ventilation of the room when operating the range hood with appliances burning gas or other fuels.
* Do not check the status of the filters when the range hood is operating, wait at least 30 minutes after switching off to avoid scalding.
* Do not touch the (Halogen) light within 30 minutes after appliance use.
* Avoid operating a gas cooker when there is no pan on the stove, it is a fire hazard and may cause damage to the hood filters.
* Disconnect the electrical plug prior to any maintenance.
* This appliance is not intended for use by young children and persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

* The range hood is for home use only and is not suitable for outdoor, barbecue, and other commercial applications.
* The range hood and its filter should be cleaned regularly for best performance. Excessive grease will impede airflow and may cause the motor to overheat.
* Before cleaning, please confirm that the power is switched off.
* Building regulations concerning the discharge of exhaust air have to be fulfilled.
* Don't cook with an open flame under the range hood.
* For any technical issues ensure that a suitably qualified person effects any repairs or inspection.

7. How to Use

* Push the Low button, and the motor runs at low speed.
* Push the Mid button, and the motor runs at mid speed.
* Push the High button, and the motor runs at high speed.
* Push the Light button, and the lamp illuminates. Push it again and the lamp will turn off.
* Push the Stop button, and the motor will stop.